

Anti Lift Locking and Auto Locks details




The shutters come with two rings on the axle for each anti-lift bracket. The bracket slides onto the top slat and fits in between the rings and the bottom motor limit is set to lock the shutter closed so that it can't be lifted.

We don't offer warranty on these as any external interruption such as something left in the opening when the shutter is closing will cause these to break.

The better option is to use the auto-lock brackets and u-sill which is a much more reliable way of getting the anti-lift and is just as secure.

Following images are for **auto locks**


Anti Lift Locking and Auto Locks details

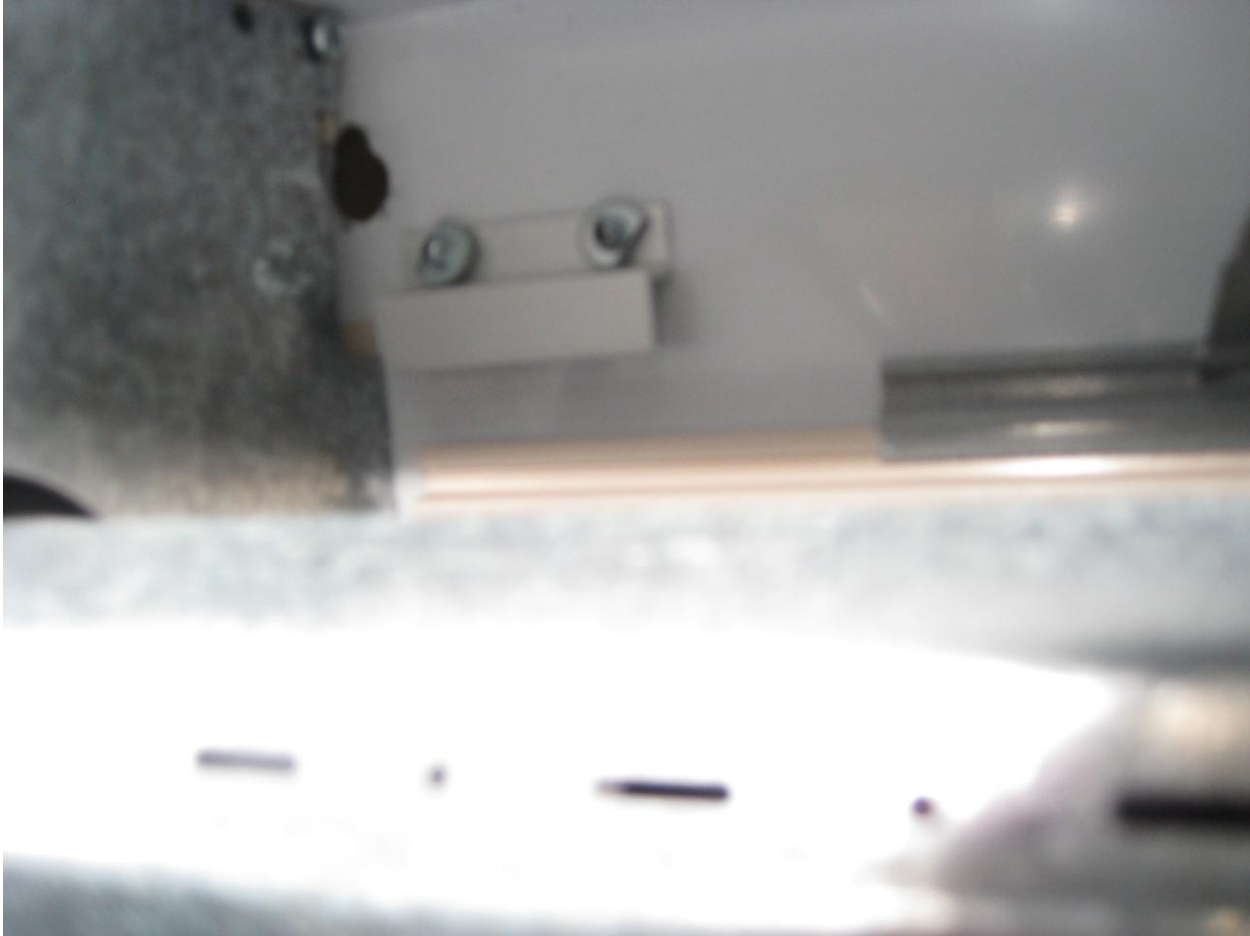

Anti Lift Locking and Auto Locks details



Heavy Duty U-sill Details

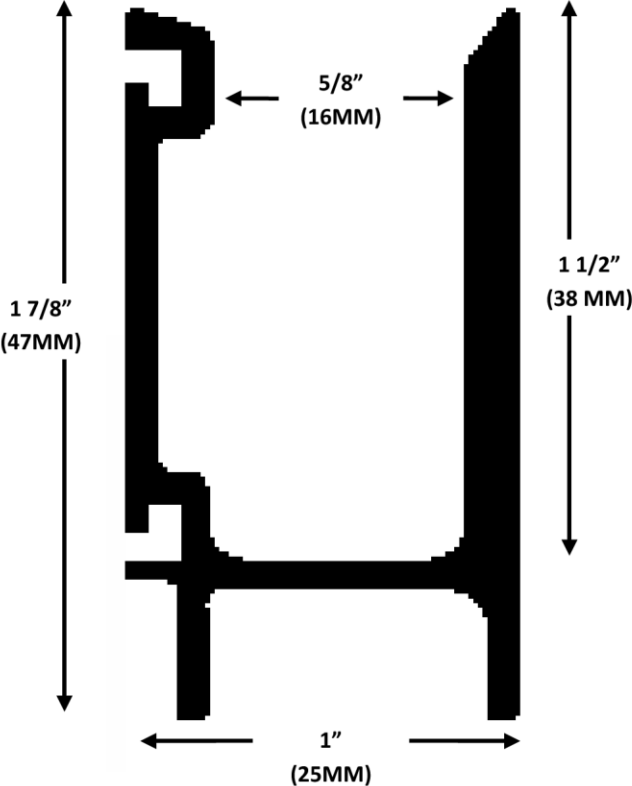

Sill helps in anti lift with autolocks